



#2 FAILURE TO LIGHT UP



#2 ENG WARM START





#2 ENG IMMINENT OVERTEMP



#2 ENG HUNG START

RECALL VALUES ON
R.H. ENGINE
MONITOR

ENGINE START

IGNITION

START

1 OFF 2

SELECT

1
NORM
MANUAL

2


SELECT
START

1 2

CABIN ALTITUDE
DUMP



#2 ENG STARTER SWITCH FAILURE TO DISENGAGE

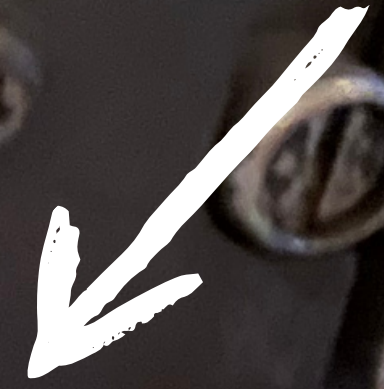

AUX
BATTERY

#1 ENG
OIL PRESS

#2 ENG
OIL PRESS



#2 ENG OIL PRESSURE BELOW 40 PSI